 
## **SOUNDART PWA FREQUENCY GUIDE**

This chart shows the restack of Digital TV channels as of January 2015. This is intended as an indicative guide only. Go to www.acma.gov.au for more detailed information. Soundart PWA systems are available in two frequencies "SETS" that cover most locations in Australia.



FREQUENCIES	520							568						610						652					694		
		PWA "B"							PWA "C"																		
			533	- 547						582 -	- 596																
TV CHANNELS	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51		
		BLOCK B							BLOCK C						BLOCK D						BLOCK E						
DARWIN		DARWIN												DARWIN CITY (TBC)													
CAIRNS							CAIRNS NORTH						CAIRNS EAST														
TOWNSVILLE									T	OWN	SVILL	E								STL	JRT /	TOWN	ISVILL	E NO	RTH		
SUNSHINE COAST		PT. ARKWRIGHT												NAMBOUR					SUNSHINE COAST NORTH								
BRISBANE	BN	ΝE	E	BRISB	ANE S	E (TBC	<u>-</u> )																				
GOLD COAST								SOUTH HINTERLAND						GOLD COAST					GOLD COAST / SOUTH HINTERLAND								
CENTRAL		SYD	YD D											GOSFORD / BOUDDI / WYONG													
SYDNEY		KINGS CROSS / MANLY												SYDNEY SOUTH WEST													
ILLAWARRA									ı	LLAW	/ARR	١															
CANBERRA														WESTON CREEK / WODEN / TUGGERANONG													
MELBOURNE			MLB										MLB INNER SUBURBS / SOUTH YARRA														
GEELONG						MLB																GEEL	ONG				
ADELAIDE							ADE	ADELAIDE FOOTHILLS																			
PERTH						PER															PE	RTH C	ITY (T	BC)			
LAUNCESTON								LAUNCESTON						Ν	IORTI	HEAS	T TAS	MANI	A								
HOBART																					HOBA	ART N SUBI	ORTH JRBS	EAST			
	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51		
		BLOCK B								BLOCK C						BLOCK D						BLOCK E					