

DYNALINK A 1012A Operating Manual

English

Thank you for choosing this product. After correctly setting, the remote will support the following categories of devices:

Key	Types of devices
TV	TV / DTV Receiver / TDT
SAT	SAT / Decoder Cable / DVB-T
DVD	DVD / DVD-R
AUX	AUX / Audio / Amplifiers / Tuners / Receivers / Audio Tape Players / MINI Systems / Misc. / HTIB / Web & Computer TV / Scart Switch Boxes / Digital Set Top Boxes / Misc. Set Top Boxes / Media Receivers / Picture Frame / Media Center PC / Home Automation / Entertainment Box / Video On Demand
CD	CD / LD
HD	HDD-DVR
DVR	DVR / VCR

※ Tip

To control other types of devices not present on the panel of the remote. Enter the code of the device as per section A and assign it to the button you wish that device to be associated with.

Example:

For the "TV" button you may use a manual code for a media player or other device by using the manual code.

Note: this is only available using method "A" as shown in these instructions.


A MANUAL INPUT OF CONTROL CODES

1. Turn on the household appliances you want to control (such as TV, STB, DVD).
2. Look up the code list for the code corresponding to the brand of the household appliances you want to control. For example, if the brand of your household appliances is "AKAI", then the first code will be **5012**.

CODE



AKAI 5012 5055 5060 5067 5098 5094 5095 5102 5120 5117 2020 2025 2021 2195 220

3. Press the device category key (such as "TV" key), and the indicator light will blink once

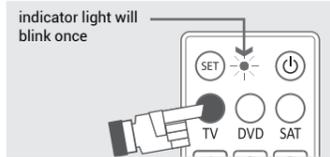

4. Press on the "SETUP"(SET) key until the indicator light lights and keeps shining; input successively the four-digit code you found.

Note: when you input each digit, the LED indicator light will blink once. When finishing inputting the indicator will turn off.

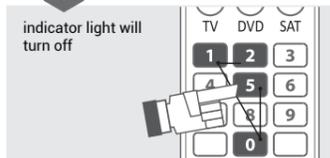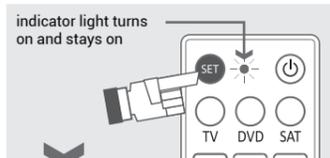


5. Check whether each function key of the remote control operates normally, if it does, it represents that the corresponding setting is successful; if some of the function keys don't operate normally, please repeat procedure 4 and input other code of the corresponding brand




B MANUAL SEARCHING FOR CONTROL CODES



1. Turn on the household appliances you want to control (such as TV, STB, DVD)
2. Press the device category key (such as TV, SAT, DVD), and the indicator light will blink once

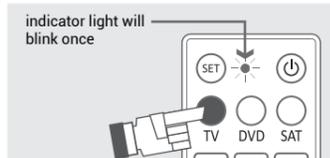

3. Press the SET key until the LED indicator light turns on and stays on.

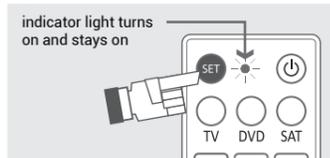

4. Point the remote control towards the infrared reception window of the equipment you're going to control, and press on "CH+" (P+) key at intervals of less than 1.5 seconds (or the remote control will enter into automatic searching mode) until the channel of the equipment changes. Then release the "CH+" (P+) key immediately and press "OK" to exit the searching mode.

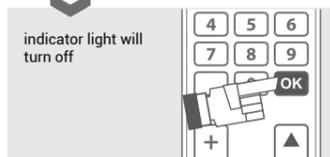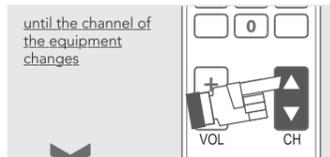


Attention:

If the equipment doesn't have "CH+"(P+) function, you may use the "PLAY" key or the "POWER" key instead, and when the equipment's status begin to change, press "OK" key to exit.


5. Check whether every function keys of the remote control work normally, if it does, the setting is successful; if not, please repeat procedure 3-4.

C AUTOMATIC SEARCHING FOR CONTROL CODES


1. Turn on the household appliances you want to control (such as TV, STB, DVD)
2. Press the device category key (such as TV, SAT, DVD), and the indicator light will blink once

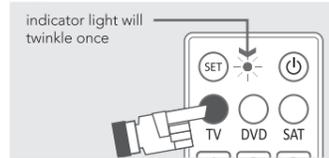

3. Press the SET key until the LED indicator light turns on and stays on.

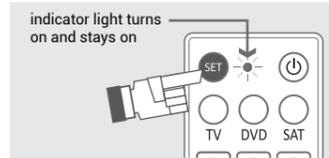

4. Point the remote control towards the infrared reception window of the equipment you're going to control, and press on "CH+" (P+) After 1.5 seconds the remote will enter auto searching mode. This will transmit a code to your equipment every second. When the channel of the equipment changes quickly press "OK" to exit the searching mode.

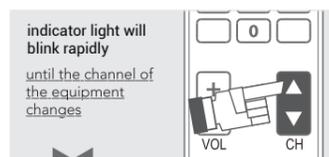

Attention:

If the equipment doesn't have "CH+"(P+) function, you may use the "PLAY" key or the "POWER" key instead, and when the equipment's status begin to change, press "OK" key to exit.

5. Check whether every function keys of the remote control work normally, if it does, the setting is successful; if not, please repeat procedure 3-4.

HOW TO PROGRAM WITH IR LEARNING

1. Press the category key of the equipment you want to learn (such as TV, SAT, DVD), and the indicator light will blink once
2. Press the SET key until the LED indicator light turns on and stays on.
3. Press the "LEARN" key, and the indicator light will blink once (or input the code **9980**)
4. Press the keys of this remote control you want to learn (except the device category key, SETUP, LEARN), such as power key, and the indicator light will blink once
5. Lie flat the original remote control (the remote control to be learned) and this remote control, and align the infrared emission window of the two remote controls and keep the distance between them being 2-5CM; press the corresponding key of the original remote control, such as the power supply key, and the indicator light will keep on shining after blinking for 1-3 sec. If your learning is not successful, then the indicator light will blink for three sec and keeps shining, and you may continue to learning other keys
6. Repeat the procedure 5 to learn other keys, and when you finish your learning, press "SETUP"(SET) key to exit the learning mode

HOW TO USE WITH COMBINED EQUIPMENT

This is related with the equipments brands and the combined equipments (TV/VCR, DVD/VCR etc.) types, for some of them, it will be ok to input one code, while for others, it requires to input two codes respectively for two different equipment keys; refer to the code list for detail.

1. Manually turn on the combined equipments you want to control.
2. Find out the code that may control the equipment using method A, B or C.

SEARCHING FOR THE CURRENTLY USED CODE

After successfully searching for the control code, if you want to know the code that controls your equipment use the following procedure.

1. Press the device type button ie: TV, SAT, DVD. The LED indicator light will blink once.
2. Press the SET key until the LED indicator light turns on and stays on.

3. Press the SET key once again and after blinking once the indicator will stay on.

4. Press number 0-9 successively until the light blinks once. This reveals the first digit of the control code being used.

5. Repeat step 4 to find the remaining 3 digits of the code. When you find the fourth digit the LED indicator light will turn off.

DELETE ALL OF THE LEARNED KEYS OF CERTAIN EQUIPMENT

1. Press the device category key you want to delete (such as TV, SAT, DVD), and the indicator light will blink once
2. Press on the "SETUP"(SET) key until the indicator light turns on and stays on.
3. Press the "LEARN" key twice, the indicator flashes once (or enter code "9981");
4. Press the number "1" key. All the learned keys of the equipment will be deleted

DELETE THE LEARNED KEYS OF ALL EQUIPMENT

1. Press on the "SETUP"(SET) key until the indicator turns on and stays on.
2. Press the "LEARN" key twice, the indicator flashes once (or enter code "9981");
3. Press the number "0" key. The learning objects of all equipments will be deleted

VOLUME CONTROL PRIORITY FUNCTION

By setting this function, you may, even if then the current controlled equipment is not TV, still be able to control TV equipment under the volume of TV control mode.

1. Press on the "SETUP"(SET) key until the indicator turns on and stays on.
2. Press the "V+"(VOL+) key, and the indicator turns on and stays on.
3. Press the key representing certain device (eg. TV, SAT, DVD, etc) to get through, the indicator flashes and goes out, and the setting is finished.

CANCEL VOLUME CONTROL PRIORITY FUNCTION

1. Press the corresponding device category key (such as TV, SAT, DVD), and the indicator light will blink once
2. Press on the "SETUP"(SET) key until the indicator turns on and stays on.
3. Press the "V-"(VOL-) key, and the indicator light will turn off after blinking twice, the volume control penetrating function being cancelled.