# 23X 1080P Network IR PTZ Camera


Thank you for purchasing 23X 1080P HD Network IR PTZ Camera . Before installation, please verify the model of the camera and read this guide carefully.

# Warnings

Installation and servicing should be performed only by qualified and experienced personnel to conform to all related codes and to maintain your warranty.



24V DC models require the use of CCC Certified power adapters to ensure compliance with electrical safety standards.

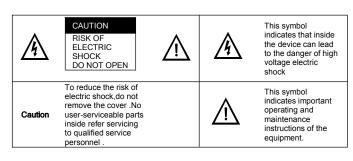



WEEE (Waste Electrical and Electronic Equipment Directive). Please dispose of the waste properly, handling the waste in compliance with local labor laws and regulations when it reaches its lifetime.



Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment

#### Note:

- 1. Please avoid operating above 60 °C high temperature environment.
- 2. Avoid to install where more violent shaking .
- 3. Connect proper power supply.
- Non-technician should not try to operate this device unless it is authorized, open or move the cover of the device may get danger, any questions please contact the professionals.

## **Packing list**

- PTZ camera (Include bracket)
- Rubber plugs and mounting screws
- CD
- Glove


#### Installation

 
- 1. Put the full function cable through the wall mount bracket and use the rubber plugs and mounting screws to fixed it.
- 2. Fixed the dome camera to the bracket tightly with screws.



PTZ Camera


## Bracket

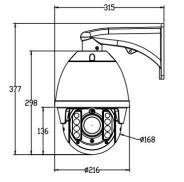




**Quick Start Guide** 




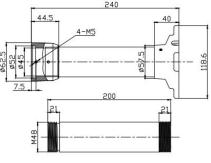

 

Ceiling mount (Optional)

#### Interface

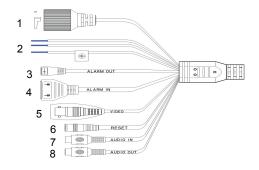

- 1. RJ45
- 2. Red 1: DC24V+ Black 1: DC24V- Yellow 1: Frame GND
- Alarm output
  Alarm input
- 5. Analog video output
- 6. Reset button
- 7. Audio input(Red)
- 8. Audio output(White)



Please use the plastic or metallic sheath to protect the connection cable for safety DC24V power supply

#### Installation environment requirements

Far away from high-temperature or humid environment, notice ventilation and avoid installing in shaky place.

#### **Recommend operating environment**

-20°C~60°C

#### Hardware installation steps

Please make sure LAN and WAN are working smoothly before the Network High Speed Dome installation. After checked all the network system in good condition, keep your hands clean and dry, following the steps below.

- •
- •
- Open the box to check the goods Take out all goods which needed for installation Connect the wires by your need(power supply,cable,audio,etc) • •
- Connect the power supply

#### Note:

- •
- •
- When open the box, please check all of parts carefully, confirm the parts as same as packing list. Please read the user manual carefully before the installation. Make sure to turn off all the power when install the camera Please confirm the power transformer, avoid the device damage with unmatched power source • •

# Specification: (varies depending on the model)

Pick-up device	1/2.8" CMOS		
Optical zoom	23X		
Effective Pixels	2MP		
S/N Ratio	≥55dB		
Min. Illumination	Color: 0.1Lux@F1.6(ACG-ON) B/W : 0.01Lux@F1.6(ACG-ON)		
Focal Length	f=4.7~108.1mm		
FOV	55.8°~3.2° (Near-Far)		
Zoom speed	About 3s		
AF Control Mode	Auto/ Semi-Auto/ Manual		
WB Mode	Auto/Auto Low Color Temperature/ White low lamp/ 4000K/ 5000K/ Sunshine/ Dark clouds/ Flash light/ Fluorescent lamp/ High fluorescent lamp/ Water bottom/ Customized		
Iris control	Auto/ Manual		
Shutter	1/5~1/5000		
Gain	100、150、200、300、400、600、800、1600、 3200、6400、12800、25600、51200、102400		
BLC	Close/ Open		
WDR	Close/1~5		
Day&Night	Color/ B/W /Auto		
Image Flip	Vertical /Horizontal		
3DNR	Close/1~5		
IR Beam Distance	150m IR distance		
Angle Field of IR	Change with focus		
IR Control	Brightness and angle changed with scene		
Operation			
Horizontal rotate	360 ° continuous rotation		
Vertically rotation	0-90°		
Manual control speed	0.1°-180°/s		
Preset	255		
Preset Accuracy	0.1°		
Preset speed	200°/s		
Area Scan	1		
Pattern	4		
Cruise	4		
Proportion zoom	Auto		
	Close/preset/Cruise/Pattern /Area scan		
PTZ Watch	Close/preset/Cruise/Pattern /Area scan		
PTZ Watch Auto reverse	Close/preset/Cruise/Pattern /Area scan Machinery reverse		

Speed Dome Cameras upgrade	Support online remote upgrade			
Network				
Video encoding	video compression		H.264/ MJPEG	
	Main- stream	resolution	1920×1080(1080p), 1280×960(960p),1280x720(720p)	
		frame rate	1~50(60)fps	
		Bit rate	800Kbps $\sim$ 10000Kbps	
	Sub- stream	resolution	720×480(D2), 640×480(VGA), 352×240, 352×288(CIF), 320×240(QVGA)	
		frame rate	1~50(60)fps	
		Bit rate	100Kbps~1000Kbps	
Audio encoding	ААС			
Privacy Mask	8 zones			
OSD	support date time、bit stream information overlay, camera title overlay, font size and color、overlay location adjustable			
Image	Brightness, Contrast, Saturability, Sharpness, Hue adjustable through explorer			
Port protocol	Onvif,GB/T28181			
Network protocol	IPv4, TCP, UDP, HTTP, SMTP, FTP, NTP, DNS, DDNS, DHCP, RTSP, RTP, RTCP			
TF card	Max 64G			
Poe	Support			
Alarm input	2ch input			
Alarm output	1ch output, support alarm linkage			
Alarm action	TF card video recording/ FTP transmission/ Email inform/ snapshot / Preset / alarm output			
Audio	1ch input 1 output, listening and bi-directional talk			
General				
IP Grade	IP66			
Operating temperature	-20°C~60°C			
Humidity	10%~90% comparatively Humidity(Non-condensation)			
Size	377 (H) x 216 (D) mm			
Weight	About 8.5Kg			
Power supply	DC24V/1.5A (±10%)			
Power Consumption	30W MAX			