

HIKVISION

HiLook



HiLook Alarm System

Next-Gen Protection with
Seamless Simplicity and Flexibility.

CONTENTS

- 02 Hilook Alarm Control Panel
- 03 Alarm Panel \ Control Tools
- 04 Wired Detectors \ Accessories
- 05 Compatible with Hikvision Alarm Products
- 06 Hilook Alarm Wiring Guide
- 07 3-Step Configuration \ APP Configuration \ How to Reset

If you encounter any issues during use, you can call the Hikvision hotline at **1300976305** or scan the **QR code** to visit the official website for more information.




HiLook products have reached a new milestone with the launch of the next-generation HiLook Alarm Family. The brand-new hybrid alarm system focuses on simplicity, reliability, and expanded flexibility, delivering outstanding performance.

HiLook Alarm is ideal for pre-installation markets, such as new housing developments. Its direct activation via a keypad simplifies project delivery, making the process exceptionally efficient.

HiLook Alarm Control Panel

Designed with user habits in mind, the compact HiLook alarm panel offers an intuitive and user-friendly experience for everyone.

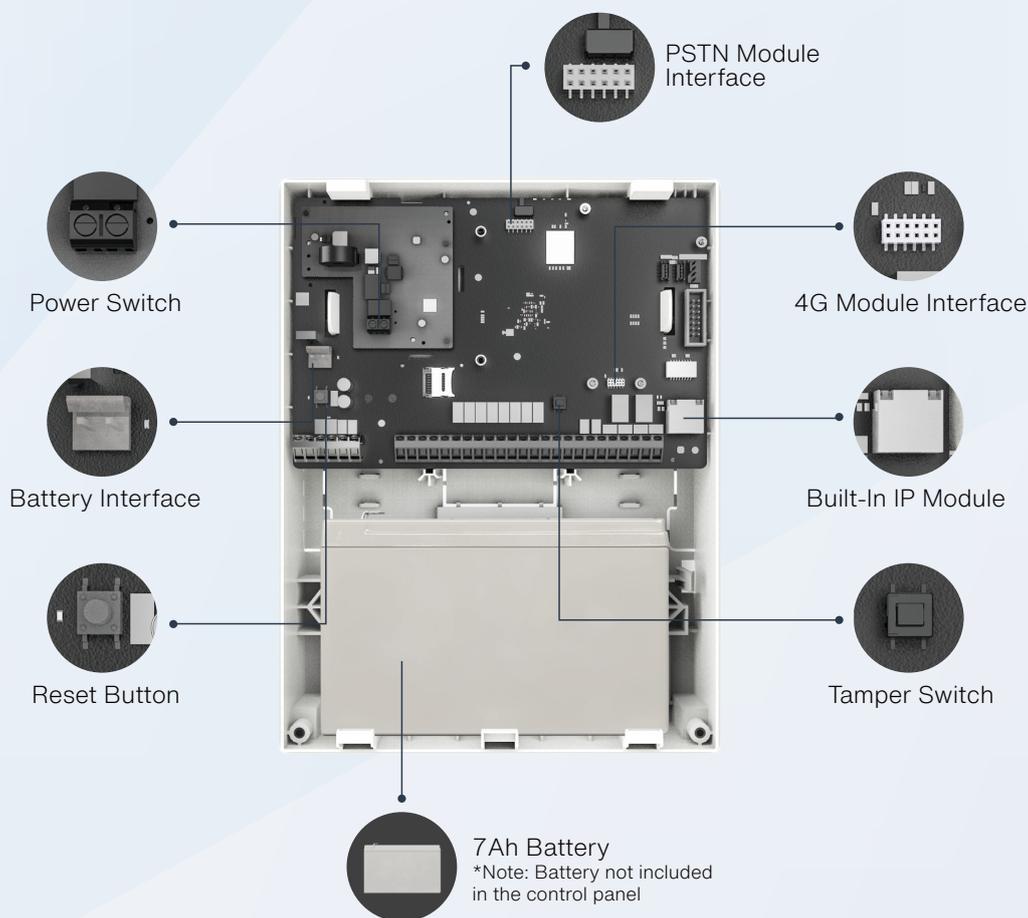

User-Friendly Design

Built-in jumpers for easy tamper alarm control and a physical reset button for quick resets.



Simple Configuration

Pre-programmed firmware allows the entire system to be configured in just three steps.



One-App Solution

Supports seamless control and management through a single app for ultimate convenience.

Alarm Panel



HA-ALARM-P48

-  8 on-board zones
-  4 on-board (2 relay&2 I/O) outputs
-  16 areas
-  Up to 4 wired keypads/48 tags/48 keyfobs/4 wired PIRCAM
-  Built-in IP module, PSTN/GPRS/4G module optional
-  Webserver/Hik-Connect/Hik-Partner Pro
-  DC-09: ARC accessible (ADM-CID/SIA-DCS)
-  Support 2-ch IPC for video verification
-  Speed-X BUS communication technology

Pre-Programmed Firmware

The Hillook Alarm Panel comes with a Pre-Programmed Firmware.


- 8 on-board zones have been programmed;
- Bell and PGM1 interface have been programmed;

	ZONE1	ZONE2	ZONE3	ZONE4	ZONE5	ZONE6	ZONE7	ZONE8
EOL Type	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL
Zone Type	Delay	Instant	Instant	Instant	Instant	Instant	Instant	Delay
Delay Time	60s	/	/	/	/	/	/	60s

	Linkage Event	Activation Mode	Pulse Duration	Other
BELL	ALARM	PULSE	300S	
PGM1	ALARM	LATCH	/	Flashing 5s when arm or disarm

Control Tools

Users can easily set the desired security mode, arm/disarm the alarm system, and more, all via wired LCD keypad, wireless tag, and keyfob.

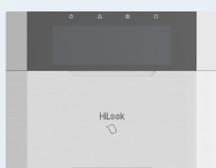

Wired LCD Keypad

HA-ALARM-KP

-  LCD screen display
-  Fire/Panic/Medical alarm key
-  2 on-board alarm inputs
-  1 on-board alarm output
-  Build-in RF receiver for keyfob enrollment
-  Supports up to 48 keyfobs
-  Supports company name, phone number, time display
-  Supports 433 MHz



Wireless Key Tag

Tag

-  Small and solid structure
-  Convenient to carry



Wireless Keyfob

HA-ALARM-KF

-  Up to 500 m transmission distance
-  Key combination customization

Wired Detectors

Continuous protection at its best! Fully programmable via the app and equipped with IFT and digital temperature compensation technology, the wired motion detector keeps everything under control.



PIR Detector
HA-ALARM-PIR1

- Front cover and back tamper
- On-board EOL resistor
- Digital temperature compensation
- Adjustable sensitivity



PIR Dual-tech Detector
HA-ALARM-PIR2

- Sealed optics
- Non-interfering 24 GHz microwave technology
- 3D optics including creep-zone protection
- Low power consumption
- Smart environmental control technology
- Anti-masking
- Anti-cloaking

Accessories



Wired External Sounder
HA-ALARM-SIREN2

- Single frequency point 110 dB (Maximum value)
- IP55 protective level
- Sound and LED flash indicated separately
- Three types of alarm sounds are available: fire alarm, panic alarm, and intrusion alarm.



Wired Sounder
HA-ALARM-SIREN1

- Up to 105 dB output
- LED flashlight
- IP54 waterproof protection
- Easy installation



15V Power Supply
HA-ALARM-Power
2-year warranty



PIR Bracket
HA-ALARM-BKT

Compatible with Hikvision Alarm Products

Communication Modules and Expanders

COMMUNICATION MODULES			WIRED I&O EXPANDERS		
	DS-PM2-S(AU) 3G/4G Communication Module	DS-PM2-P PSTN		DS-PM1-I8O2-H Speed-X Input Expander	DS-PM1-O4L-H Speed-X Output Expander (Low current)

Wired Detectors


WIRED INDOOR DETECTORS					
	DS-PDD12P-EG2 Dual-Tech Detector	DS-PDD15AM-EG2 Dual-Tech AM Detector	DS-PDC10DM-VG3 Dual-Tech Detector	DS-PDCL12DT-EG2 Dual-Tech Ceiling Detector	DS-PDP18-EG2(P) PIR Detector
					
	DS-PDC15-EG2 PIR Detector	DS-PDC5NC-EG2 PIR Curtain Detector	DS-PDC10AM-VG3 External PIR Curtain Detector	DS-PDCL12-EG2 PIR Ceiling Detector	DS-PDSKM-VG3 Seismic Detector
					
	DS-PDSK-P Shock Detector	DS-PDBG8-EG2 Glass Break Detector	DS-PDPG12P-EG2 PIR-Glass Break Detector	DS-PDPC12P-EG2 Wired PIRCAM	DS-PD1-MC-MS Wired Magnetic Contact

Compatible Wireless Accessories

★ COMPATIBLE WIRELESS ACCESSORIES					
	DS-PM1-RT-HWB Wireless Receiver (433MHz)	DS-PDMC-EG2-WB(B) Wireless Magnetic Detector	DS-PDP15P-EG2-WB(B) Wireless PIR Detector	DS-PDC15-EG2-WB(B) Curtain PIR	DS-PM1-O1L-WB Wireless Relay Module

*For unlisted detectors or peripherals, contact local distributor or Hikvision support for compatibility confirmation.


Hilook Alarm Wiring Guide

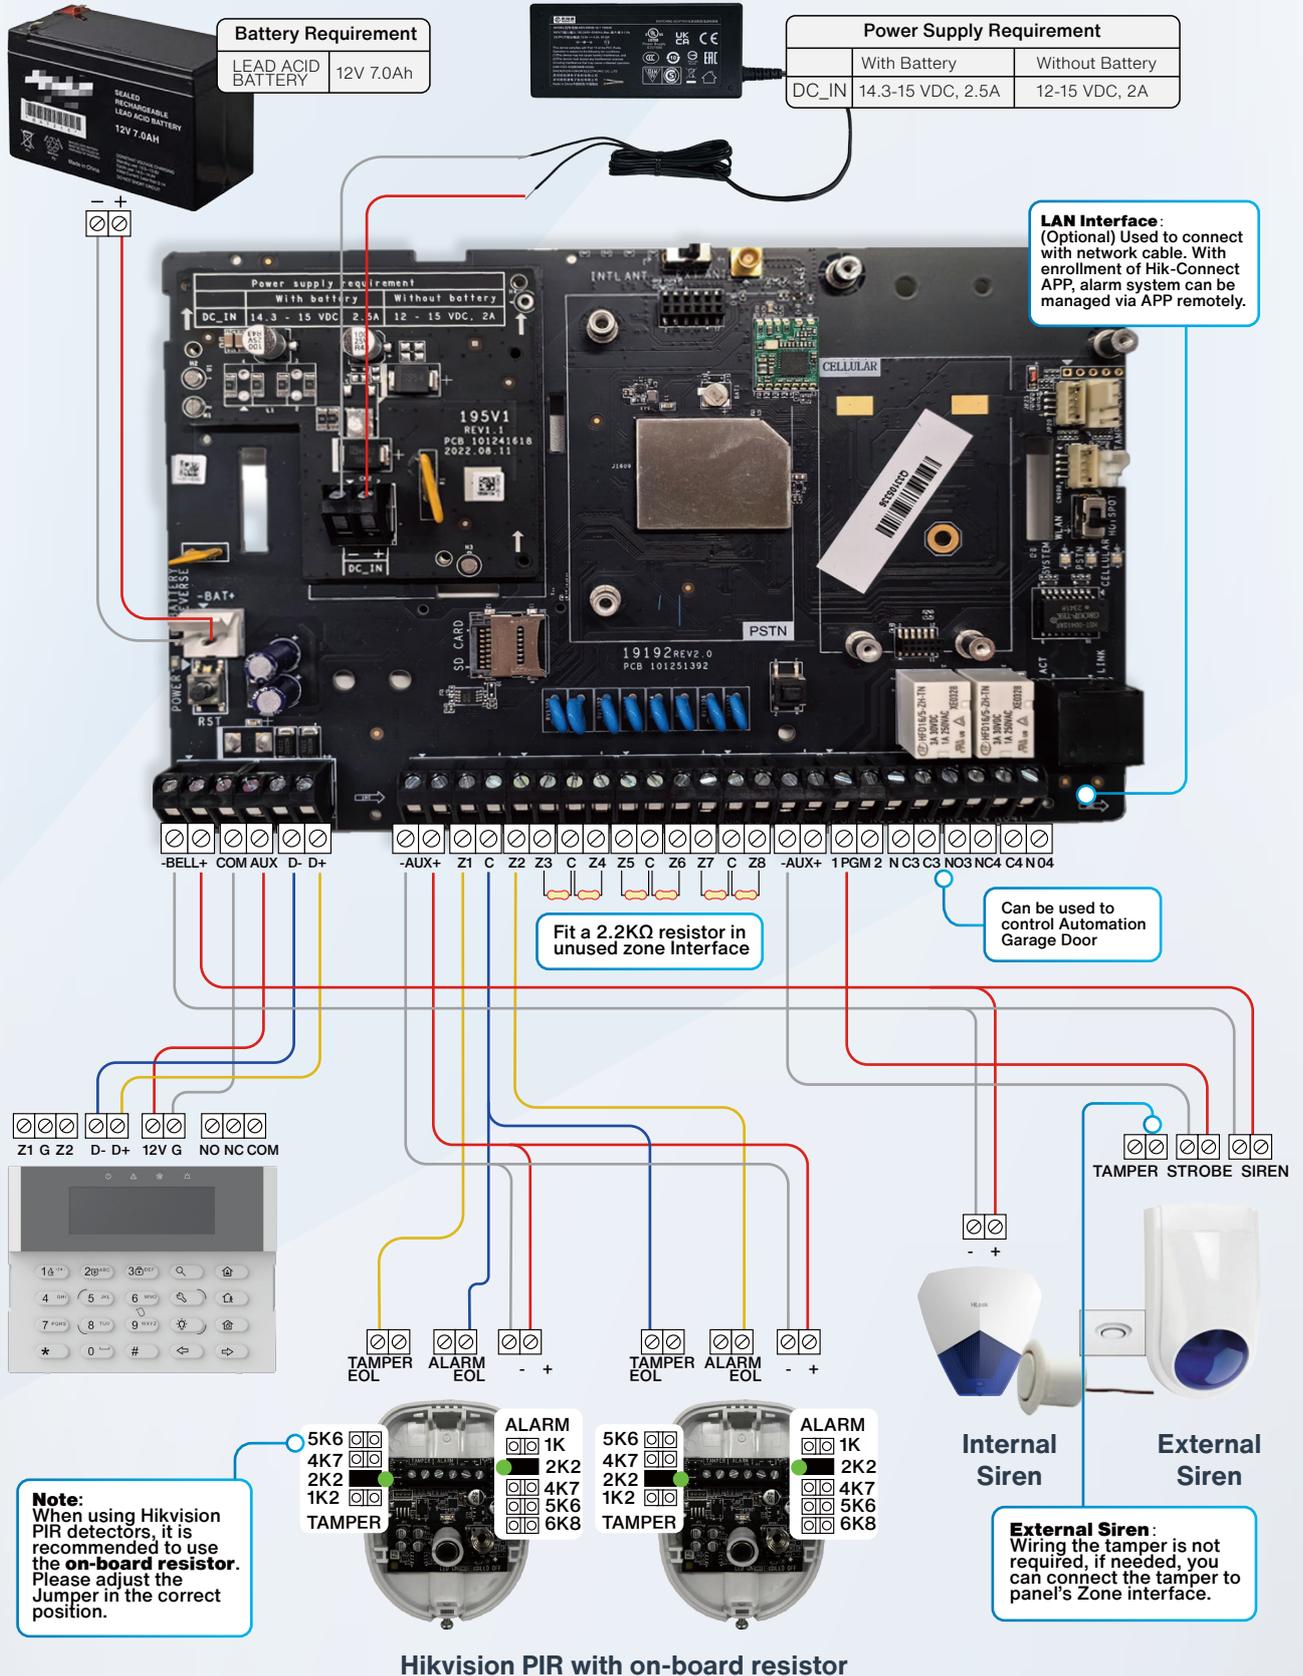

Hikvision PIR with on-board resistor

3-Step Configuration

Step 1 Activate alarm Panel

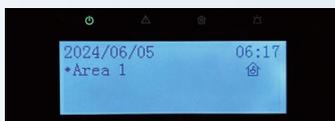


1. Power the Alarm Panel and wait until the keypad auto-enrolled. You will see the keypad enrolled successfully as in the picture.
2. Press the default admin code (the default code is the last 6 number of the alarm panel series number) and then press you will enter activation mode.
3. Enter the admin password (webpage password) and confirm it to activate the alarm system.

* The default admin code will be changed to **258258** when second version of the HiLook Alarm is released.

* Please note, the webpage password must contain both characters and numbers and is used to log in to the alarm panel webpage for advanced settings.

Step 2 Changing User Code

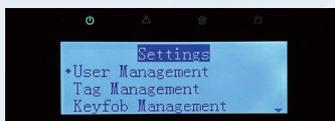

1. Entering Settings Mode --Press default admin code and then press to enter Settings Mode, as in the picture
2. Choose User Management then press **#(OK)**.
3. Choose Add User then press **#(OK)**.
4. Enter user name then press **#(OK)**.
5. Enter user code twice to confirm.
** Up to 46 Operators can be added.


Step 3 Changing Time



1. Enter Settings Mode.
2. Press **↓→9th** to choose Date & Time then press **#(OK)**.
3. Choose Date then press **#(OK)**.
4. Enter the correct Date then press **#(OK)** to confirm.
5. Choose Time then press **#(OK)**.
6. Enter the correct Time then press **#(OK)** to confirm.


APP Configuration

Step 1 Connect to Internet

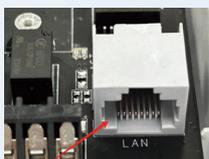

Connect the device to the internet using an Ethernet cable.

 Step 2 Check Connection Status



Go to setting mode-Network-Cloud to check the **connection status**, make sure it is **online**.

Step 3 Enroll to the APP



- Go to setting mode-Network-Cloud-QR code
- Using APP (Hik-Connect or Hik-Partner Pro) to scan the QR code to enroll the device.

How to Reset

Step 1:

Open the main case.



Step 2:

Power on the panel.



Step 3:

Wait for this LED[sys] light to turn green.



Step 4:

Long press and hold the reset button



Step 5:

When the red light flashes 5 times, release the button.



Step 6:

The panel will automatically restart.

