


How to control the CA1250 via the PC RS232 connection?

1. Download the Serial & TCP_UDP tool from the CA1250 product download section;
2. Unzip the downloaded file;
3. Connect the CA1250 to the PC via the RS232 lead;
4. Turn on the CA1250;
5. Run the Serial & TCP_UDP tool from the PC;
6. Make sure the COM settings are the same as the following:

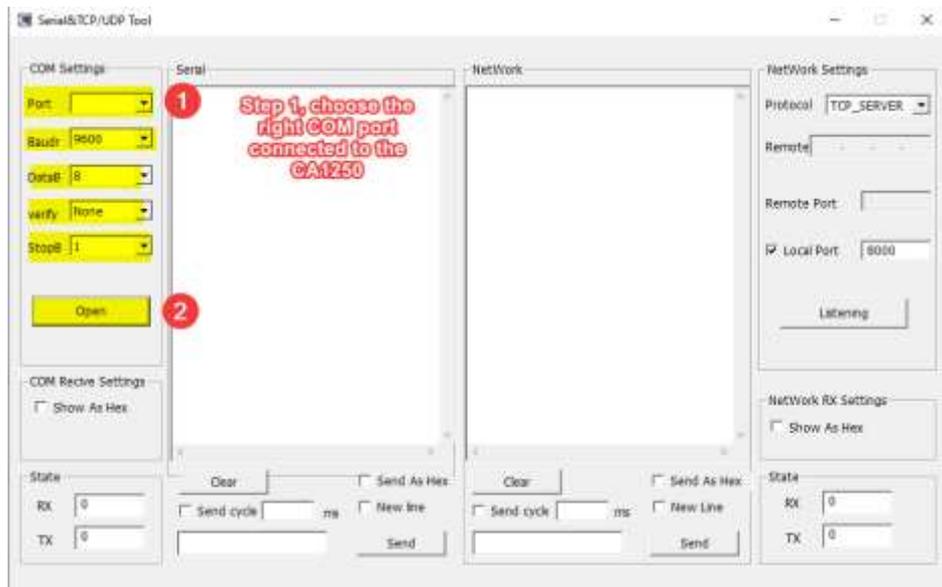

7. Select the right COM port, and then click “Open”, connect the PC to the CA1250;
8. Add the command, then click “send”. Refer to the Command list from the product download section. For example, to turn off zone 2, type !2PR0+, then click “send”. It will show the response if it is successful.

