


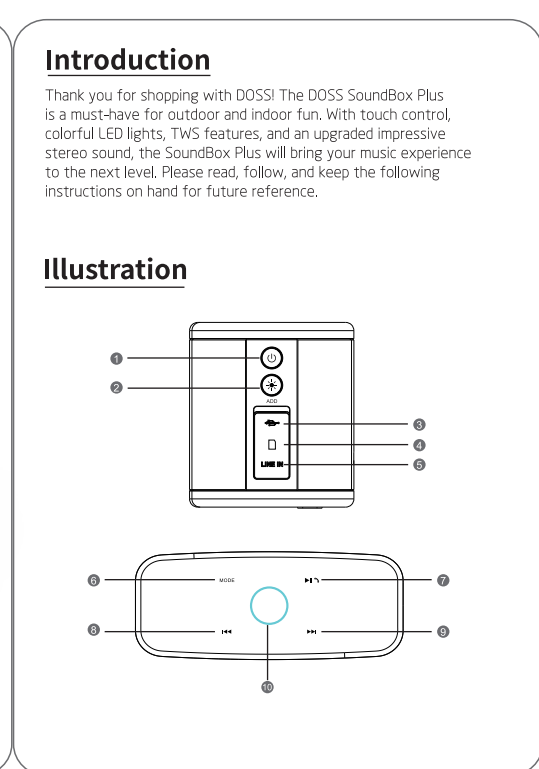

Thank you for shopping with DOSS! The DOSS SoundBox Plus is a must-have for outdoor and indoor fun. With touch control, colorful LED lights, TWS features, and an upgraded impressive stereo sound, the SoundBox Plus will bring your music experience to the next level. Please read, follow, and keep the following instructions on hand for future reference.

The diagram shows the front and top views of the device. The front view (top) includes callouts 1 (top edge), 2 (left edge), 3 (top-left corner), 4 (top-right corner), 5 (left side of the display), 6 (right side of the display), 7 (bottom edge), 8 (bottom-left corner), 9 (bottom-right corner), and 10 (top edge of the display). The top view (bottom) includes callouts 11 (left edge), 12 (right edge), 13 (top edge), 14 (bottom edge), 15 (left side of the display), 16 (right side of the display), 17 (bottom edge of the display), and 18 (top edge of the display).

1	On/Off button
2	Add (TW5 and light control) button
3	Charging port
4	TF card jack
5	Audio-in port
6	Mode button
7	Play/ hand free button
8	Left arrow
9	Right arrow
10	Volume control button

Indicators		
Center Indicator/Control Button	Flashing Blue	Indicates that the speaker has entered into the pairing mode and it is ready to be paired
	Steady blue	Indicates that the device is successfully paired
	Steady red	Indicates that the device has switched to the auxiliary input mode
	Steady Green	Indicates that the device has switched to the TF mode
	OFF	If there is no operation in 10 seconds
Charging Indicator	Steady red	Charging
	OFF	Fully charged

- Use the supplied USB cable to charge your portable speaker directly from your computer mini USB port or the cellphone adapter (please confirm its output is 5V)
- Make sure that the speaker is fully charged before using it for the first time.
- LED light will remain RED when charging and turn off once fully charged.
- Note:
 1. If the speaker beeps every few seconds, please recharge it for 4-5 hours.
 2. The speaker has a built-in battery saver mode where it will automatically power off if not in use for 15 minutes. This function can be removed with a firmware upgrade. For assistance, please contact: support@docssay.com

You want to	How to do
Turn On/Off	Press power button
Disconnect the device	Tap and hold Play/hand free button
Reconnect with last device	Tap Play/hand free
Play/Pause	Tap Play/hand free
Volume up	Rotate your finger clockwise
Volume down	Rotate your finger counterclockwise

- **Pair your speaker with your smart device**
 1. Place your speaker and the smart device no more than 1 meter away from each other.
 2. Press the power button and hold it for a few seconds to turn the speaker on. Upon powering on, a blue light will light up. The blue LED starts flashing, and will be accompanied by a prompt notifying that the pairing has entered into the pairing mode.
 3. Turn on Bluetooth on your device and choose SoundBox Plus for the list.
 4. If the pairing is successful, the LED will change to solid blue and the speaker will start playing the music you have selected from the Bluetooth for 5 seconds and try again.
 5. Connect your smart device to the SoundBox Plus using the Bluetooth.
 6. Now, your smart device should successfully detect the SoundBox Plus, please keep pressing the play/pause button and then try again.
- **Have connecting problems via Bluetooth?**
 1. Make sure that your device is within 1 meter from the speaker, or close the Bluetooth pairing list on your smart device.
 2. Restart smart device power.
 3. Try pairing (step 1) above again.
 4. If problem still not solved, Contact DOSTS customer service at support@dosits.com

1. When using the audio input mode, control audio playback via the connected device.
2. When auxiliary cable is plugged, play mode will automatically switch to AUDIO IN mode.

1. Card capacity: 32G or below. If your micro SD card is larger than 32G, please format it to FAT32 or FAT.
2. Support files: mp3, flac, wav.
3. Play order: music will play in the download/copy order

1. When there is an incoming call, each "eye" will flicker with red/green/blue tint, while playing music, the "eyes" will light up and alternate between the various colors of a rainbow.
2. Briefly tap the play/hand free button to pick up.
3. Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
4. Tap the play/hand free button again to end the call.

Start the first speaker
Turn on the speaker, press and hold the ADD button for 3 seconds.

Start the second speaker
Turn on the second speaker, press and hold the ADD button for 3 seconds.

- Start the master speaker within 60 seconds, otherwise the stereo pairing setting of the first speaker will be canceled.
- If pairing succeeds, the volume control ring of the master speaker is in flashing blue, the secondary is in solid white.
 - 1. If pair the master speaker with your device via Bluetooth, the ring of the master is in solid blue, the secondary is in solid white.
 - 2. If pair the master speaker with your device via cable, the ring of the master is in solid red, the secondary is in solid white.
- The speaker will have stereo pairing automatically if they need to be paired.
- Press and hold Play/pause free button for 3 seconds to cancel the stereo pairing mode.
- Under wireless stereo pairing, you can only change the mode of (Bluetooth) audio-in on the master speaker.

1. Voice command will not be able to turn on/off the SoundBox Plus if you connect to it via Bluetooth / Aux cable.
2. To remove the battery saver option, please contact our customer service at support@dossav.com.

Problems	Solutions
No power	Battery may be in protection mode or drained. Plug in and charge the speaker.
Low battery prompt tone	Please recharge the speaker. It takes 4-5 hours to get fully charged.
Battery cannot be charged	- Make sure you are using a USB cable provided by BOSS or from a qualified manufacturer. - Use a different USB cable.
The pairing with your mobile fails	- Turn off the Bluetooth on your device and then turn it on. Remove your device from the Bluetooth list on the speaker and then reselect it. Try pairing them again. - Reset your speaker.
Two mode does not work	Disconnect the Bluetooth, press and hold the "AOD" button separately.

Problems	Solutions
No power	Battery may be in protection mode or drained. Plug in and charge the speaker.
Low battery prompt tone	Please recharge the speaker. It takes 4-5 hours to get fully charged.
Battery cannot be charged	- Make sure you are using a USB cable provided by BOSS or from a qualified manufacturer. - Use a different USB cable.
The pairing with your mobile fails	- Turn off the Bluetooth on your device and then turn it on. Remove your device from the Bluetooth list on the speaker and then reselect it. Try pairing them again. - Reset your speaker.
Two mode does not work	Disconnect the Bluetooth, press and hold the "AOD" button separately.

 no sound	- Make sure select Soundbox from the physical device. - Increase the volume on your speaker and on your device. - Use a different music source. - Try pairing a different device. - Use your smart device connects to the speaker together with other devices, please make other devices.
 too sound when in audio mode	- Make sure the device connected to your speaker is on and play music. - Increase the volume on your speaker and on your device. - Make sure the device is properly connected. - Try using a different cable. - Try connecting to a different device.
 Poor sound quality/ buzzing sound	- Try using different music sources. - Increase the volume on device. - Check the device's audio settings. - Charge your speaker until fully charged.

- Do NOT drop, hit, or shake the device.
- Do NOT disassemble, repair, or modify the speaker.
- Do NOT use cleaning fluid that contains benzene, solvents, or alcohol.
- Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods of time.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on the speaker.
- Do NOT use the speaker near a microwave oven or wireless LAN device.

Changes or modifications to this unit not expressly approved by DOSS Corporation responsible for compliance could void the user's authority to operate the equipment.

- Output: 8W*2
- Input: DC5V --- 2A
- Battery: 3.6V --- 3200mAh
- Unit dimension: 7.6 x 3.3 x 3.1 inches
- Play time: Up to 20 hours (50% volume, without lights)
- Bluetooth distance: 66ft
- Warranty: One-year limited

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The FCC's exposure standard is based on the Specific Absorption Rate (SAR) of measurement known as the Specific Absorption Rate, or SAR. The FCC limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested configurations. Because the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Since the device is designed to operate at multiple power levels so as to use only the power required to reach the network.

In general, the closer you are to a wireless base station antenna, the more power the device must use. While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

DOSS

For updates, promotions, and experience sharing,
join our customer community.

 @dossav
@dossfans

 @dossdirect

 support@dossav.com

 <https://www.dossaudio.com>

 1-833-275-3677 Mon-Fri 9AM-6PM PDT (USA)

FCC