LCDP29

Installation Instruction

LED/LCD/PLASMA FULL-MOTION WALL MOUNT
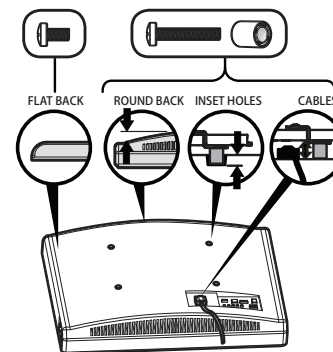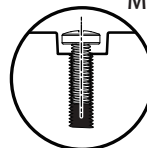
3.1

C   D

E

G

M6   M8

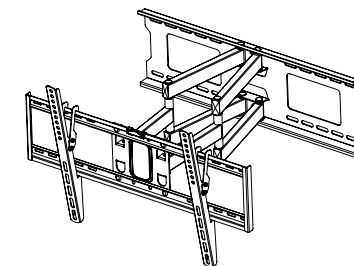FLAT BACK   ROUND BACK   INSET HOLES   CABLES

4

Hang TV on wall mount
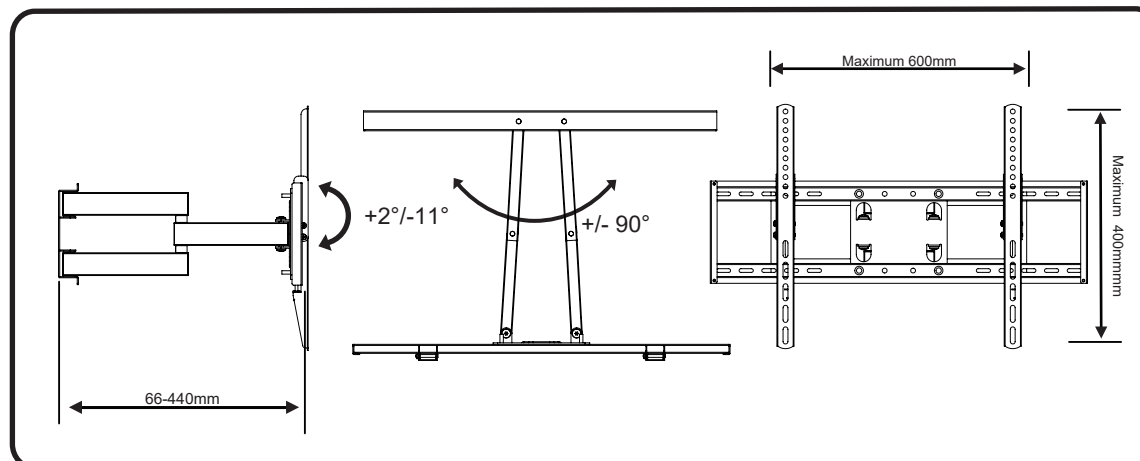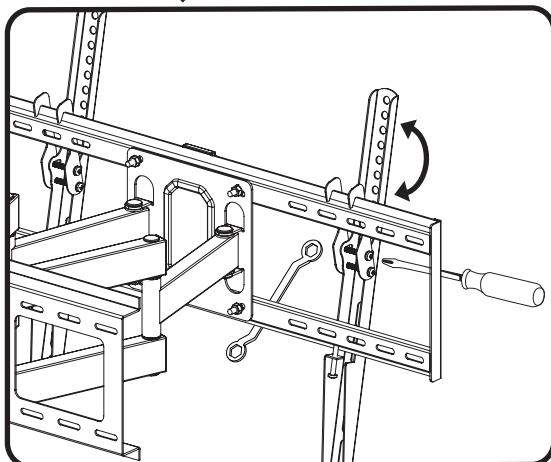
Adjusting TV

4.2
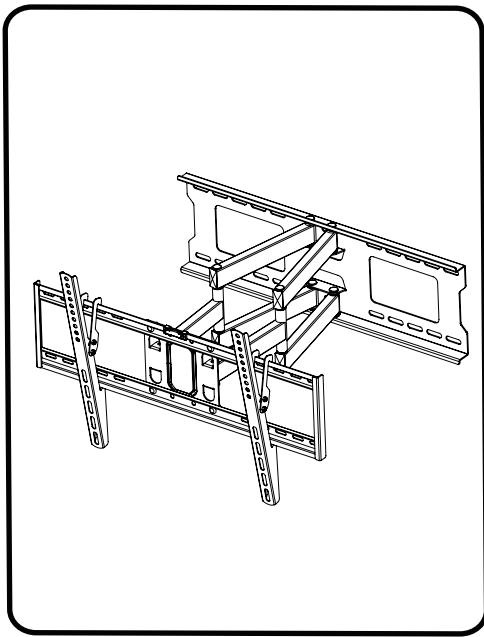
H
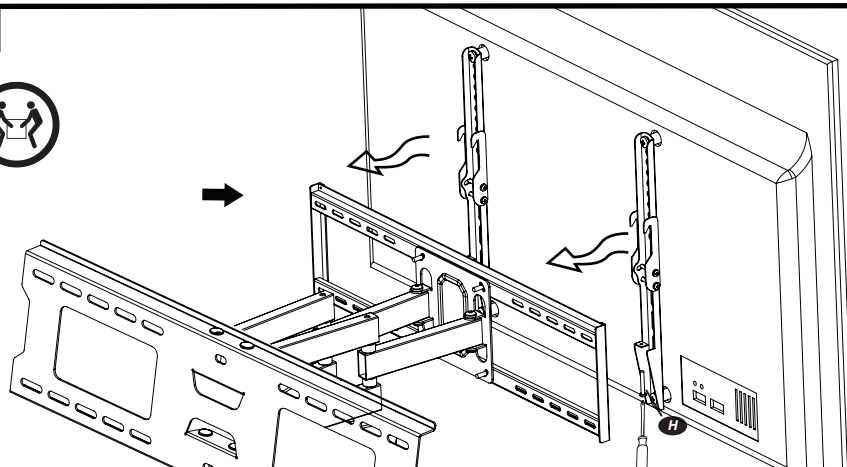
3

Attach bracket to TV

IMPORTANT SAFETY INSTRUCTOPNS

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV. If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact your Customer Service.
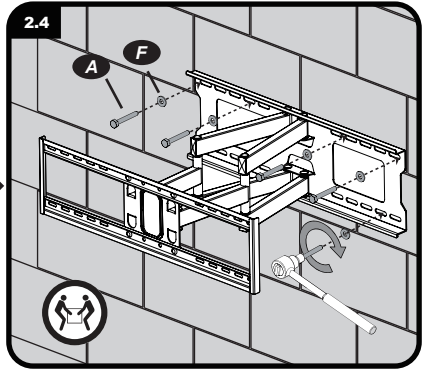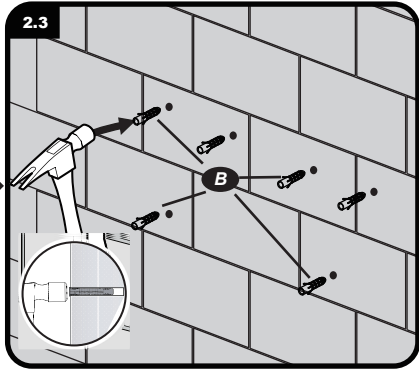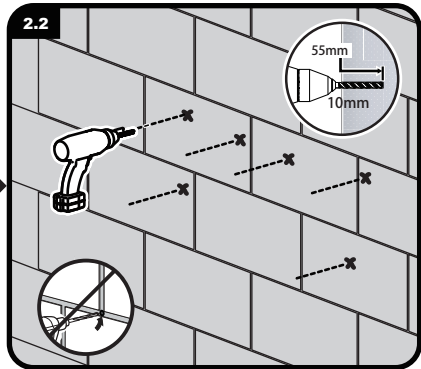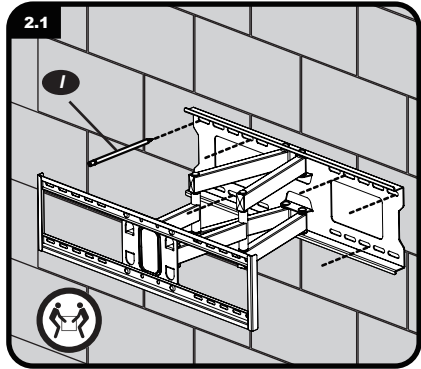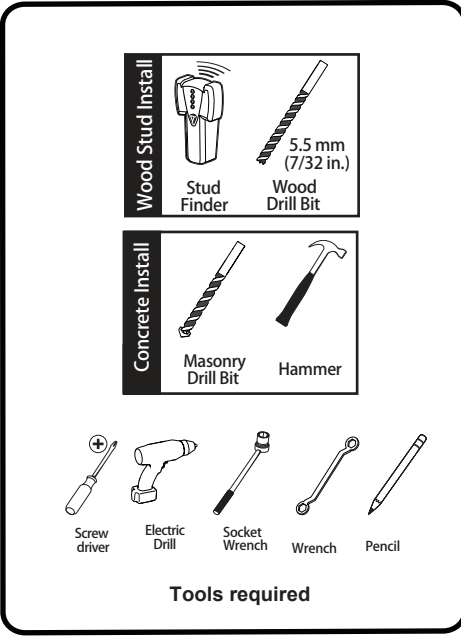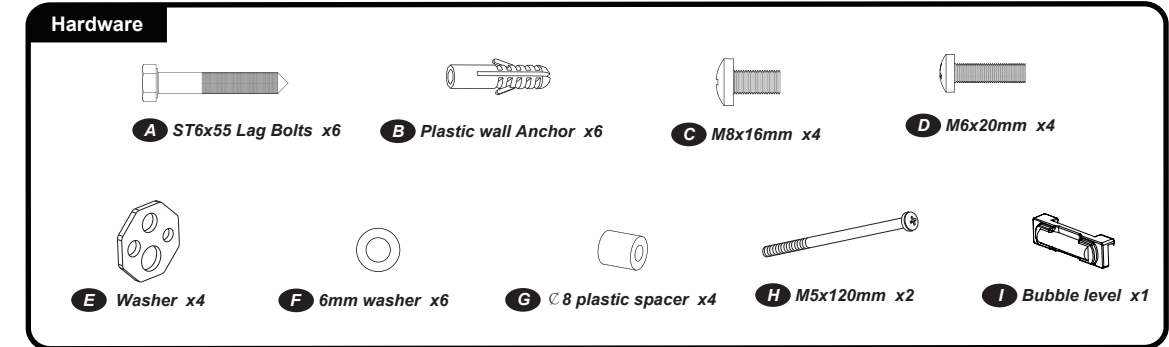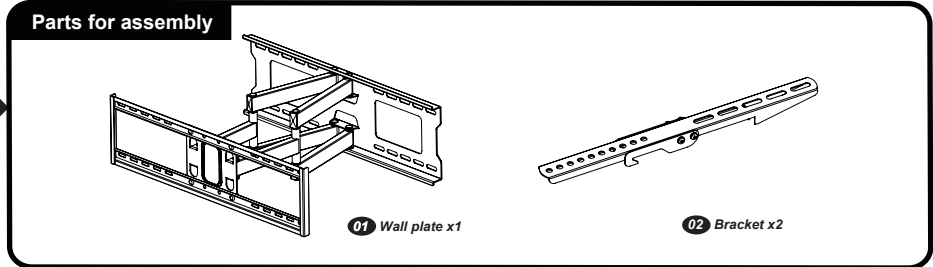
⚠ **CAUTION**: Avoid potential personal injuries and property damage!
- This product is designed for use in solid concrete, and concrete block walls - DO NOT install into drywall alone!!
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Do not use this product for any purpose not explicitly specified by manufacturer.
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.
- This wall mount is intended for use with television that does not exceed the maximum weight capacity designated. Using this mount with products heavier than the maximum weight indicated may result in instability causing possible injury.
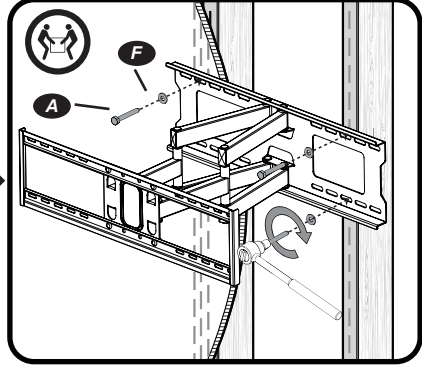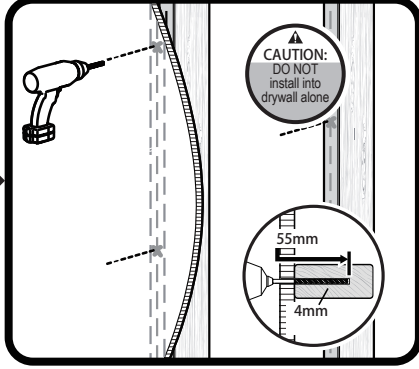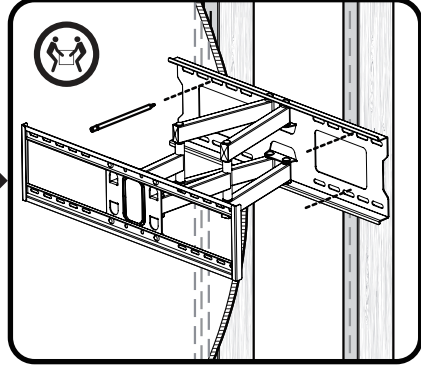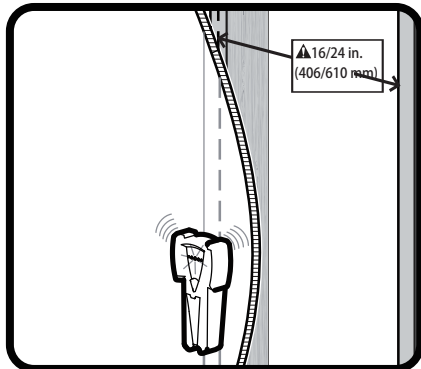
Maximum 600mm

Maximum 400mmmm

+2°/-11°   +/- 90°

66-440mm

1 preparation

Parts for assembly

01 Wall plate x1

02 Bracket x2

Hardware

A ST6x55 Lag Bolts x6

B Plastic wall Anchor x6

C M8x16mm x4

D M6x20mm x4

E Washer x4

F 6mm washer x6

G ⌀ 8 plastic spacer x4

H M5x120mm x2

I Bubble level x1

Wood Stud Install

Stud Finder

Wood Drill Bit
5.5 mm (7/32 in.)

Concrete Install

Masonry Drill Bit

Hammer

Screw driver

Electric Drill

Socket Wrench

Wrench

Pencil

Tools required

2 Attach mount to wall (Solid Concrete wall)

2.1

I

2.2

55mm
10mm

2.3

B

2.4

A *F*

Attach mount to wall (Wood Stud wall)

⚠ 16/24 in. (406/610 mm)

CAUTION: DO NOT install into drywall alone

55mm
4mm

F

A